

ICOM RP-1510 REPEATER

How To PROGRAM EPROM

ADDRESS 03ED ~ 03FF IS FOR PROGRAMING CALL SIGN

ADDRESS 03ED AND 03EF ARE FOR "DE" ONLY

03ED SHOULD BE EA

03EF SHOULD BE 80

ADDRESS	CALL SIGN	MACHINE LANGUAGE
03ED	D	EA EA
03EE	<u>E</u>	EA 80
03EF } SPACE FOR ONE WORD	W	BB
03F0 } 03F0	<u> </u>	80
03F1 } SPACE FOR ONE WORD	R	BA
03F2 } 03F2	<u> </u>	00
03F3 } 03F3	3	AB
03F4 } 03F4	3	BB
03F5 } 03F5	<u> </u>	00
03F6 } 03F6	W	BB
03F7 } 03F7	<u> </u>	80
03F8 } 03F8	X	EA
03F9 } 03F9	<u> </u>	70
03FA } 03FA	A	BB
03FB } 03FB	<u> </u>	00
03FC } 03FC	/	EA
03FD } 03FD	<u> </u>	74
03FE } 03FE	R	BA
03FF } 03FF		00

TIMER - ID AND TIME OUT ARE THE SAME.

TIMER LOCATIONS ARE 264, 267, 26F AND 272.

FOR 10 MINUTE TIMER & ID

ADDRESS	CODE
264	3F
267	12
26F	90
272 272	4C

A	B8,00	T	E0,00
B	EA,40	U	AE,00
C	EB,A0	V	AB,80
D	EA,00	W	BB,80
E	80,00	X	EA,70
F	AE,40	Y	EB,B8
G	EE,40	Z	EE,50

I	A0,00		
J	BB,B8	∅	EE,77,70
K	EB,80	1	BB,BB,80
L	BA,40	2	AE,77,00
M	EE,00	3	AB,B8,00
N	E8,00	4	AA,70,00
O	EE,70	5	AA,4000
P	BB,A0	6	EA,50,00
Q	EE,5C	7	EE,54,00
R	BA,00	8	EE,75,00
S	A8,00	9	EE,77,40